




IMPORTANT SAFEGUARDS


Fundamental safety warnings


 **Danger!** This is an electrical appliance, it is therefore important to respect the following safety warnings:


- Never touch the appliance with wet or damp hands.
- Never use the appliance with bare or wet feet.
- Never touch the plug with damp hands.
- Never immerse the appliance in water.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the power cable as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- To reduce the risk of electric shock, your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your qualified electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified electrician.
- Never move the appliance by pulling on the power cable.
- The appliance must not be modified in any way, as any modifications may be extremely dangerous.
- Do not use an extension cable.
- The appliance must be installed in accordance with the rules on household appliances in force in the country concerned.

 **Important!** If the supply cord is damaged, it must be replaced by the manufacturer its service agent or similarly qualified persons in order to avoid a hazard.

 **Important!** Keep all packaging (plastic bags, polystyrene foam) away from children.

 **Important!** Do not obstruct the air intake and outlet grills.

 **Important!** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 **Important!** Disconnect the appliance from the electrical supply before installing the supplied filters.

SAVE THESE INSTRUCTIONS THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

INTRODUCTION

Thank you for choosing a De'Longhi product. Please take a few minutes to read these instructions. This will avoid all risks and damage to the appliance.

Troubleshooting and repairs

If the appliance requires repair, always contact the manufacturer's Customer Services.

Always insist on original spare parts.

Repairs carried out by unauthorised personnel may be dangerous and invalidate the warranty.


Designated use

This is a household appliance only. Use only as described in these instructions.

As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be used when operating and installing the appliance.

TECHNICAL CHARACTERISTICS

- De'Longhi purifiers incorporate the latest technological features for home air filtration;
- The air is taken in through the front panel;
- The contaminated air passes through a washable prefilter which removes large impurities such as coarse dust, hair, etc. The partially filtered air is then passed through a long-lasting HEPA filter with a large filtering surface, easily recognisable by the special pleated paper. This HEPA (High Efficiency Particulate Air) filter removes impurities down to a size of 0.3 microns, filtering all types of particle including tobacco, house dust and pollen;
- The air is then passed through a black active carbon filter which removes a variety of pollutants and unpleasant odours such as smoke, fine dust particles and formaldehyde. Some models have an active nano-silver filter. The appliance is also equipped with a filter with photocatalytic titanium dioxide with a UVC lamp.
- The purified air is returned to the room through the top grille. The upward flow of air improves air circulation in the environment, without generating irritating currents.
- When active, the independently controlled ionizer releases a cloud of beneficial negative ions into the room together with the outflow of filtered air, allowing the removal of dust particles, pollen, cigarette smoke and car exhaust fumes.
- On contact with the negative ions, the particles of dust suspended in the air are negatively charged and can combine with the positively charged particles to form larger particles which will then be filtered by the purifier. The negative particles are attracted by positively charged surfaces, such as the floor or wall.
- Negative ions improve the ion balance in the atmosphere, as positive charges generally predominate. The ionizer therefore helps reduce the static electricity created by the presence of rugs, carpet, televisions and computer screens.

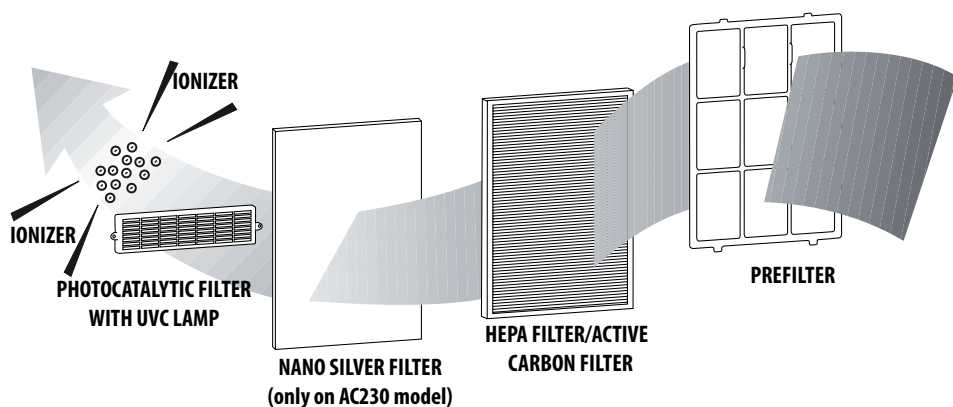

TECHNICAL DATA

Power supply	see rating plate
Absorbed power	"
Suitable for rooms of up to	220 sq.ft (21 m ²) Mod. AC230 150 sq.ft (14 m ²) Mod. AC150
Number of fans	1
Fan speed	3
Ionizer button (ON/OFF)	YES

DESCRIPTION

- A) Front panel
- B) Washable prefilter
- C) HEPA filter/active carbon filter
- D) Nano-silver filter (Model AC230 only)
- E) Photocatalytic filter with UVC lamp
- F) Air quality sensor
- G) AQS (Air Quality System) Air quality LED indicator
- H) Handle
- I) Filtered air outlet grille
- L) Power cable with plug
- M) Cable compartment
- N) Control panel
 - O) ON/OFF
 - P) Fan speed icons
 - Q) AUTO icon
 - R) Ionizer icon
 - S) AQS (Air Quality System) air quality LED indicator on/off
 - T) Auto-off
 - U) Reset button
 - V) Fan speed LED display
 - W) LED timer (1-2-4-8 h)
 - X) HEPA filter exhausted LED
- Y) Safety microswitch

USE

Read these instructions before using the appliance.

- Unpack the air purifier and place on a stable flat surface so that the air intake in the front panel and air outlet (top grille) are not blocked. A good position in the room might be at least 3 feet (1 m) from the wall.
- Remove the front panel (fig. 3). Inside the purifier you will find the prefilter (B) and HEPA filter/active carbon filter (C) and the nano-silver filter (D) (Model AC230 only) packed, depending on the model, in a plastic bag. And the photocatalytic filter (E) fixed to the air intake grill.
- Remove the filter(s) (depending on the model) from the bag, as shown in fig. 2, then place them in the following order: nano filter, with the silver side adhering to the appliance, HEPA filter with the black active carbon side resting directly on and adhering to the nano-silver, then the prefilter, slotting it in place as shown in fig. 4.
- Replace the front panel;
- After making sure the voltage in your home corresponds to the voltage indicated on the appliance, plug the appliance into the mains socket.

- Remove the protective film from the control panel.
- Turn the appliance on by touching the ON/OFF icon (O). The corresponding icon lights up and the appliance comes on automatically at minimum speed. The AUTO icon (Q) flashes and the air quality LED indicators (G) light up orange for 3 minutes. This time is necessary for the appliance to detect air quality, then the AUTO icon becomes steady and the air quality LED indicators (G) change colour depending on the air quality detected and also the fan speed changes accordingly:

BAD AIR QUALITY:

orange + max. fan speed

SATISFACTORY AIR QUALITY:

green + med. fan speed

GOOD AIR QUALITY:

blue + min. fan speed

i *Please note: the change in colour of the air quality indicator (G) is always sequential:*
ORANGE <-----> GREEN <-----> BLUE

i *Please note: to vary the set fan speed, touch the icon (P) corresponding to the required fan speed (Min/Med/Max).*

- The LED corresponding to the selected speed lights up.
- i** *Please note: When the appliance starts after having been turned off, using a light pressure on the ON/OFF, it starts with the last function set with the exception of the auto-off function.*

“AUTO” operation (Q)

Tap the “AUTO” icon, the appliance independently decides the fan speed according to the air quality detected (min, med, max).

Ionizer icon (R)

For the release of negative ions into the environment through purified air, touch the ionizer icon (R). The corresponding LED lights up.

Auto-off (T)

This function can be used to turn the appliance off automatically after a given period of time. With the appliance on, touch the auto-off icon (T) to select

how many hours should elapse before the appliance goes off (1-2-4-8 hours), the corresponding LED comes on.

AQS (S)

Tap the **AQS** icon (Air Quality System) to enable or disable the air quality LED indicators (**G**). This function is particularly useful if you want to completely eliminate the light source, during night operation for example.

i **Note: the AQS icon enables or disables the LED indicators only while the air quality detection system is always active.**

HEPA filter exhausted LED (X)

When the filter LED (**X**) flashes, the HEPA filter/active carbon filter must be replaced. Proceed as follows:

After unplugging the appliance from the mains socket, remove the front panel (**A**) and the prefilter (**B**), then remove the HEPA filter/active carbon filter (**C**) and replace with a new one obtainable from De'Longhi's authorised Customer Services. Replace the filters in the correct sequence as described above, then put the front panel back.

At this point, turn the appliance back on and reset as follows:

- insert a fine object into the hole in the reset button (**U**) and press until the flashing LED comes on steadily. Release the button. After about 5 seconds, the filter LED (**X**) goes off.

i **Please note: Before performing cleaning and maintenance, always unplug the appliance from the mains socket.**

i **Please note: Pressing the reset button (U) for less than 3 seconds activates/deactivates the icon tone.**

i **Please note: The appliance has a safety microswitch (Y) which turns the appliance off whenever the front panel (A) is removed.**

Cable compartment (M)

The appliance has a practical cable compartment (**M**), useful for storing the cable when the appliance is not in use.

CLEANING THE APPLIANCE

Clean the outside of the appliance with a soft slightly damp cloth to remove dust, dirt or fingerprints. The front panel and prefilter can be removed and washed separately in hot soapy water (they are NOT dishwasher safe). Dry the components thoroughly before putting them back in the appliance. The top grille can be cleaned with a soft brush.

Do not clean the appliance by immersing in water.

i **Please note: Before performing cleaning and maintenance, always unplug the appliance from the mains socket.**

MAINTENANCE AND FILTER REPLACEMENT

- Remember that the efficiency of your air purifier depends on the condition of the filters. They should therefore be checked regularly by removing the front panel.

Prefilter (B)

- Check the prefilter regularly.
If large quantities of dust and other impurities have accumulated, remove and hand wash in hot soapy water. Dry thoroughly before replacing in the appliance.
- Frequent cleaning of the prefilter helps extend the life of the HEPA filter/active carbon filter.
- When the filter goes from white to dark grey or brown, it must be replaced.

HEPA filter/active carbon filter (C)

- The life of a HEPA filter/active carbon filter depends on the operating conditions of the appliance.
In general, considering about 4 hours operation a day at medium speed with normal quantities of dust/smoke in the air, it should last about 6 months. However, when the HEPA filter exhausted LED (**X**) flashes, it must be replaced. (See the HEPA filter exhausted LED indicator paragraph).
To replace the HEPA filter/active carbon filter, first remove the prefilter (**B**), then remove the HEPA filter/active carbon filter (**C**) and replace with a new one.
- Do not wash the HEPA filter/active carbon filter. When exhausted, it cannot be regenerated.
- Replacement De'Longhi filters can be obtained from the manufacturer's Customer Services and select retailers.

Nano-silver filter (D) (Model AC230 only)

- The nano-silver filter (D) has a lifelong duration because it is protected by the HEPA filter. However, regular vacuuming is recommended.

Photocatalytic filter with UVC lamp (E)

- It is a permanent filter that requires no maintenance. **IT MUST NEVER BE REMOVED** as it acts as protection for the UVC lamp.

Limited warranty **en**

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or replacement model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com

Residents of Mexico: Please contact our toll free number 01-800-711-8805 for assistance or log onto our website at www.delonghi.com

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states/countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does country law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/country to country.